

# ÇS035


## CABLE CARRIERS STEEL SERIES

Inner Height (A) 35mm	Code	Radius	(A)mm	(B)mm	(C)mm	(D)mm
<ul style="list-style-type: none"><li>Both up and bottom parts (bars) are openable</li><li>Should be used in supporting tray</li><li>Suitable for low speeds</li></ul>	ÇS 035 040 R	75-300	35	40	58	66
	ÇS 035 060 R	75-300	35	60	58	86
	ÇS 035 080 R	75-300	35	80	58	106
	ÇS 035 100 R	75-300	35	100	58	126
	ÇS 035 125 R	75-300	35	125	58	151
	ÇS 035 150 R	75-300	35	150	58	176


Maximum working speed :0.5M/S

Radius MUST be given in your orders. Example:

ÇS 035 040 R75

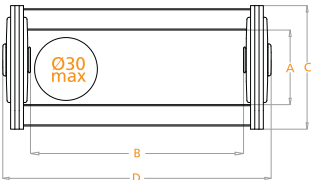

R mm	H mm	X mm	M mm	Y mm
50	50	134	67	257
250	50	534	267	885

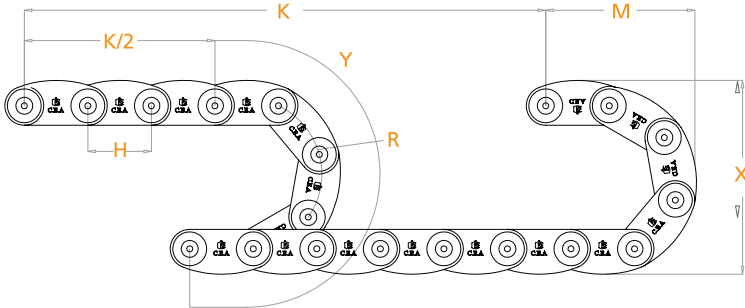


L: Total length to be used  
K: Movement distance  
Y: Radius

$$L: \frac{K}{2} + Y$$



### IMPORTANT POINTS

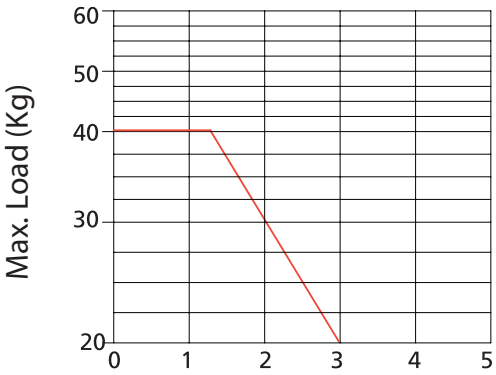


$$\frac{K}{2}$$
 Max. Length without support


#### Self-supporting Capacity Diagram

Self-supporting capacity of the cable carrier according to weight of the cables and hoses

$$\frac{K}{2}$$

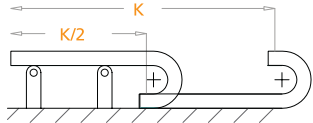


- How to use support rollers:
- Special separators can be made upon request
  - Can be made by stainless steel material upon request
  - Should be used in supporting tray
  - Be careful against strong knocks
  - Be sure that diameter of hydraulic pipe is max 30 mm.

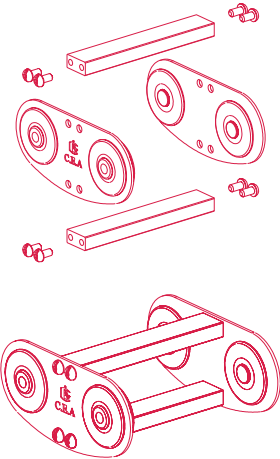

### How to choose end bracket

#### End bracket

End brackets are the parts to be used to fix the cable carrier to the machine or equipment

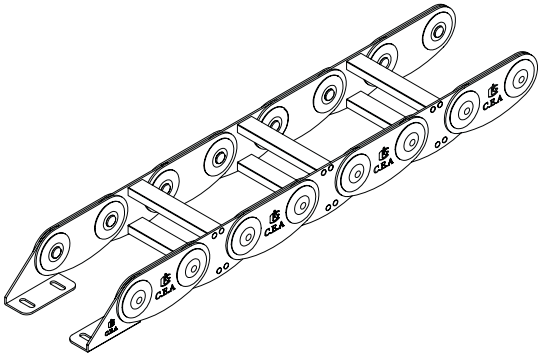

Should be attached to the both ends of the cable carrier

CABLE CARRIER CODE	END BRACKET CODE	A	B
ÇS 020 040 R	ÇS 020 040 B01	25	64
ÇS 020 050 R	ÇS 020 050 B01	35	74
ÇS 020 060 R	ÇS 020 060 B01	45	84
ÇS 020 070 R	ÇS 020 070 B01	55	94
ÇS 020 080 R	ÇS 020 080 B01	65	104
ÇS 020 100 R	ÇS 020 100 B01	85	124

