


CABLE CARRIERS HEAVY SERIES


Inner Height (A) 40mm	Code	Radius	(A)mm	(B)mm	(C)mm	(D)mm	Weight Kg/Mt
<ul style="list-style-type: none">• Both up and down sides are openable• Suitable for long distances• Both up and down sides have complete covers (caps)• Should be used in supporting tray	SD0K 100 R_01	125-150-170-200-220-285-350	40	100	60	140	2.500gr
	SD0K 140 R_01	125-150-170-200-220-285-350	40	140	60	180	2.900gr
	SD0K 200 R_01	125-150-170-200-220-285-350	40	200	60	240	3.500gr

Maximum working speed :5M/S

Radius MUST be given in your orders.Example: SD0K 100 R150

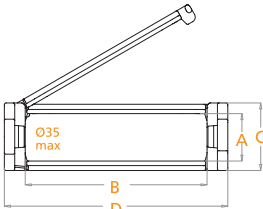

R mm	H mm	X mm	M mm	Y mm
125	100	320	270	590
150	100	360	290	630
170	100	400	310	730
200	100	460	360	820
220	100	500	390	891
285	100	630	425	1095
350	100	760	490	1299

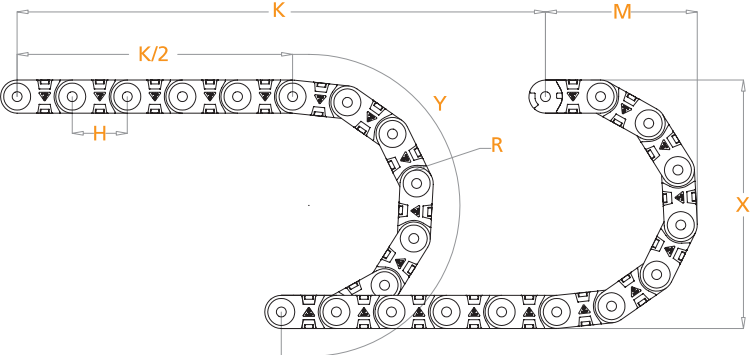


L: Total length to be used
K: Movement distance
Y: Radius

$$L:\frac{K}{2}+Y$$



IMPORTANT POINTS

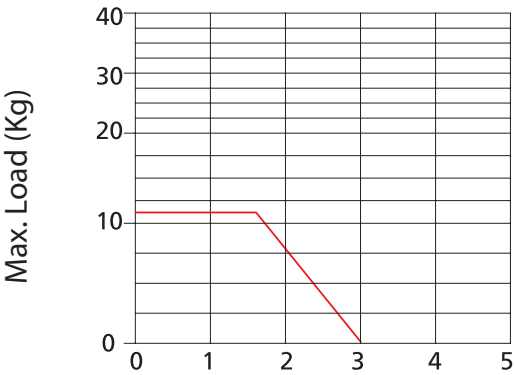


$\frac{K}{2}$ Max. Length without support


Self-supporting Capacity Diagram

Self-supporting capacity of the cable carrier according to weight of the cables and hoses

$$\frac{K}{2}$$

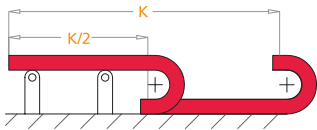


- How to use support rollers:
- Support rollers should be used after 4 meters
 - Make sure that the cap (cover) is fixed properly
 - Use an appropriate hand tool (screw driver) to open the cap
 - Be careful not to damage the fixing nail of the cap (cover)
 - Be sure that side stoppers, used to fix end brackets are fixed properly

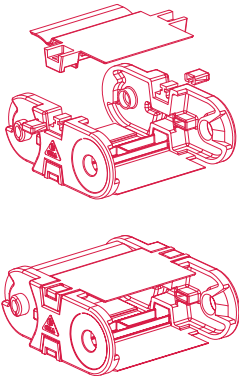

How to choose end bracket

End bracket
End brackets are the parts to be used to fix the cable carrier to the machine or equipment

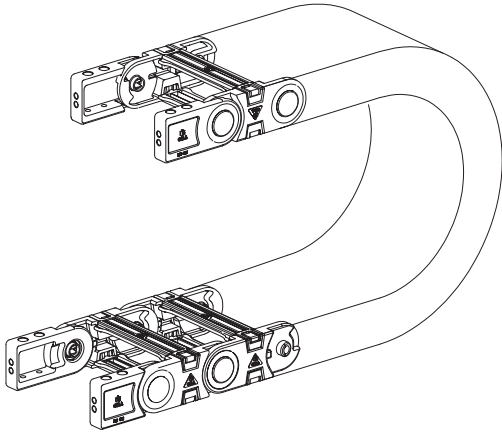

Should be attached to the both ends of the cable carrier.

CABLE CARRIER CODE	END BRACKET CODE	A	B
SD0K 100 R01	SD0 B01	100	140
SD0K 140 R01	SD0 B01	160	180
SD0K 200 R01	SD0 B01	220	240

