

SE1S AL


CABLE CARRIERS SLIDING SERIES WITH ALUMINUM BAR

Inner Height (A) 55mm	Code	Radius	(A)mm	(B)mm	(C)mm	(D)mm	Weight Kg/Mt
<ul style="list-style-type: none">Both up and down sides have openable aluminum barsSuitable for long distancesNo complete covers (caps) (on both sides)Should be used in supporting traySuitable to use with separators	SE1S AL 250 R_01	150-200-250	55	250	85	290	2.325gr
	SE1S AL 300 R_01	150-200-250	55	300	85	340	2.630gr
	SE1S AL 400 R_01	150-200-250	55	400	85	440	2.960gr
	SE1S AL 500 R_01	150-200-250	55	500	85	540	2.390gr
	SE1S AL 600 R_01	150-200-250	55	600	85	640	2.490gr
	SE1S AL 700 R_01	150-200-250	55	700	85	740	2.590gr


Maximum working speed :5M/S

Radius MUST be given in your orders. Example:

SE1S AL 250 R150

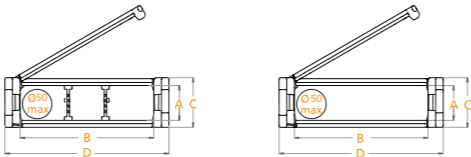


R mm	H mm	X mm	M mm	Y mm
150	75	380	257	621
200	75	480	307	778
250	75	580	357	935

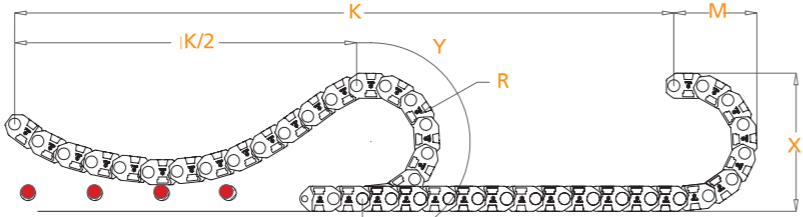


Should be used with supporting tray and rollers.
Code of support roller is ST01

L: Total length to be used
K: Movement distance
Y: Radius

$$L: \frac{K}{2} + Y$$

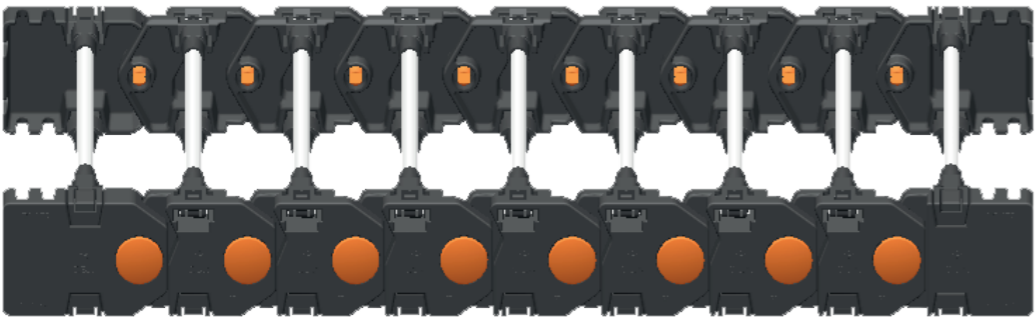

IMPORTANT POINTS

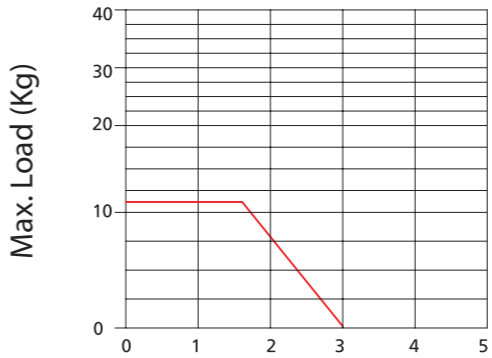


$$\frac{K}{2} \text{ Max. Length without support}$$

Self-supporting Capacity Diagram

Self-supporting capacity of the cable carrier according to weight of the cables and hoses

$$\frac{K}{2}$$

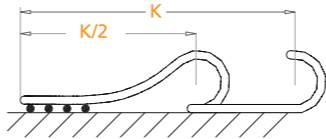


- How to use support rollers:
- Make sure that the cap (cover) is fixed properly
 - Use an appropriate hand tool (screw driver) to open the cap
 - Be careful not to damage the fixing nail of the cap (cover)
 - Be sure that side stoppers, used to fix end brackets are fixed properly

How to choose end bracket

End bracket

End brackets are the parts to be used to fix the cable carrier to the machine or equipment

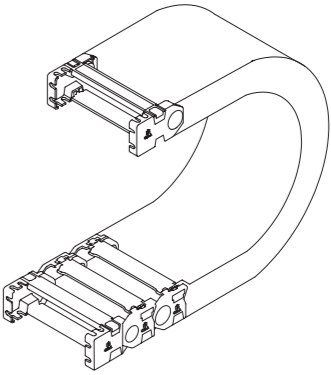

Should be attached to the both ends of the cable carrier

CABLE CARRIER CODE	END BRACKET CODE	A	B
SE1S AL 250	SE1 B250	270	290
SE1S AL 300	SE1 B300	320	340
SE1S AL 400	SE1 B400	420	440
SE1S AL 500	SE1 B500	520	540

