


SE1SK

CABLE CARRIERS SLIDING SERIES


Inner Height (A) 65mm	Code	Radius	(A)mm	(B)mm	(C)mm	(D)mm	Weight Kg/Mt
<ul style="list-style-type: none">• One side is fixed, other (radius) side is openable• Should be used in supporting trays over 4 meters• Suitable for long distances, over 4 meters• Both sides have complete covers (caps)• Suitable to use with separators	SE1SK 100 R_01	150-200-250	65	100	85	140	2.575gr
	SE1SK 200 R_01	150-200-250	65	200	85	240	3.471gr

Maximum working speed :5M/S

Radius MUST be given in your orders. Example: **SE1SK 100 R150**

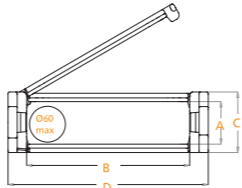


mm	H mm	X mm	M mm	Y mm
150	75	380	257	621
200	75	480	307	778
250	75	580	357	935

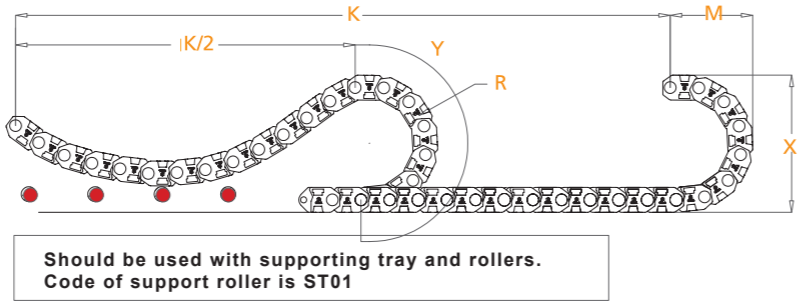


Should be used with supporting tray and rollers.
Code of support roller is ST01

L: Total length to be used
K: Movement distance
Y: Radius

$$L: \frac{K}{2} + Y$$

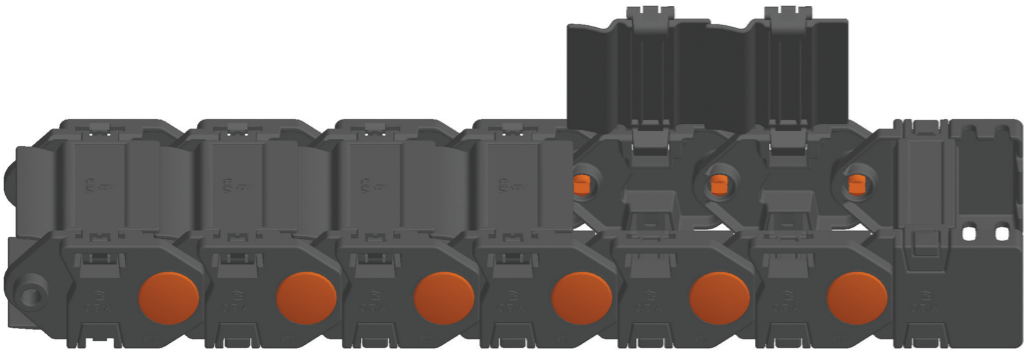


IMPORTANT POINTS

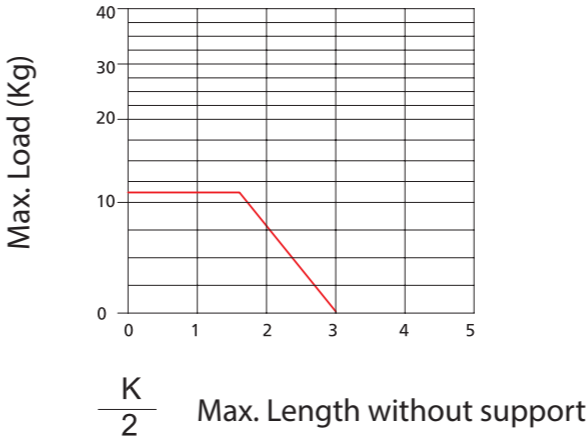


Self-supporting Capacity Diagram

Self-supporting capacity of the cable carrier according to weight of the cables and hoses $\frac{K}{2}$

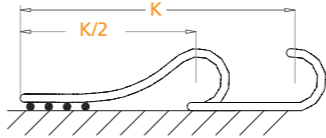


- How to use support rollers:
- Make sure that the cap (cover) is fixed properly
 - Use an appropriate hand tool (screw driver) to open the cap
 - Be careful not to damage the fixing nail of the cap (cover)
 - Be sure that side stoppers, used to fix end brackets are fixed properly

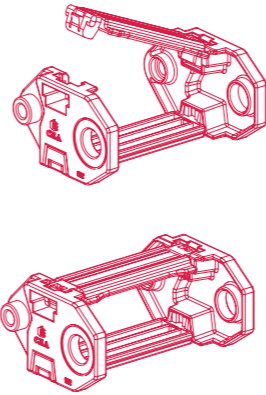

How to choose end bracket

End bracket
End brackets are the parts to be used to fix the cable carrier to the machine or equipment

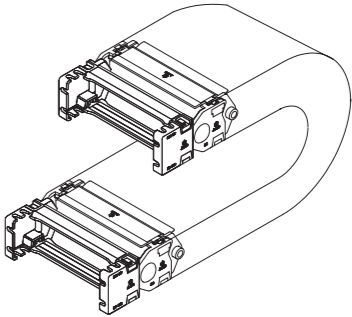

Should be attached to the both ends of the cable carrier

CABLE CARRIER CODE	END BRACKET CODE	A	B
SE1S 080 R01	SE1 B080	100	120
SE1S 100 R01	SE1 B100	120	140
SE1S 120 R01	SE1 B120	140	160
SE1S 140 R01	SE1 B140	160	180
SE1S 175 R01	SE1 B175	195	215
SE1S 200 R01	SE1 B200	220	240

